
Installation instructions



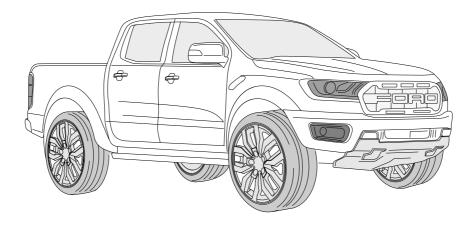


750036EJ

FORD Ranger PX2 FORD Ranger PX3


08/15-09/18 10/18-04/22



SCAN FOR LATEST INSTRUCTIONS

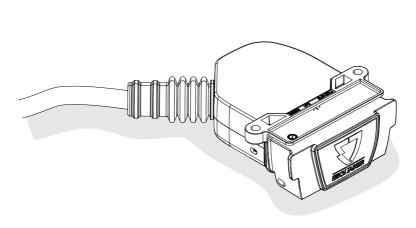













Reference:


The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge. The vehicle manufacturers' current technical notices and information on retrofitting must be followed. The removal and replacement instructions found in the current repair manuals must be followed.

It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


OVERVIEW

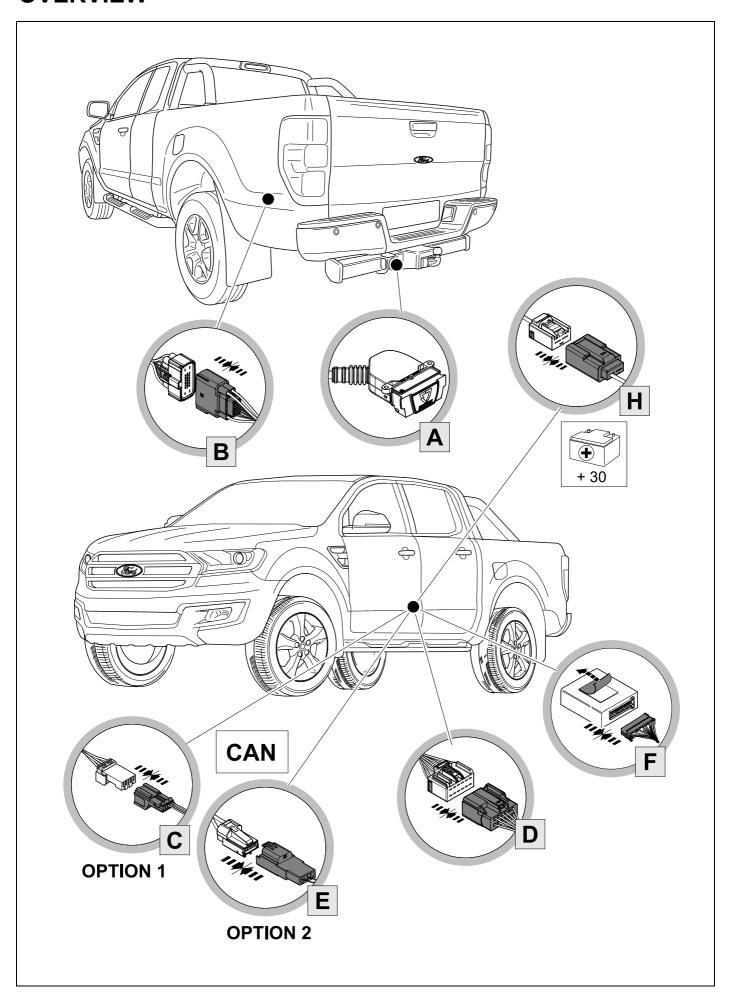


KIT

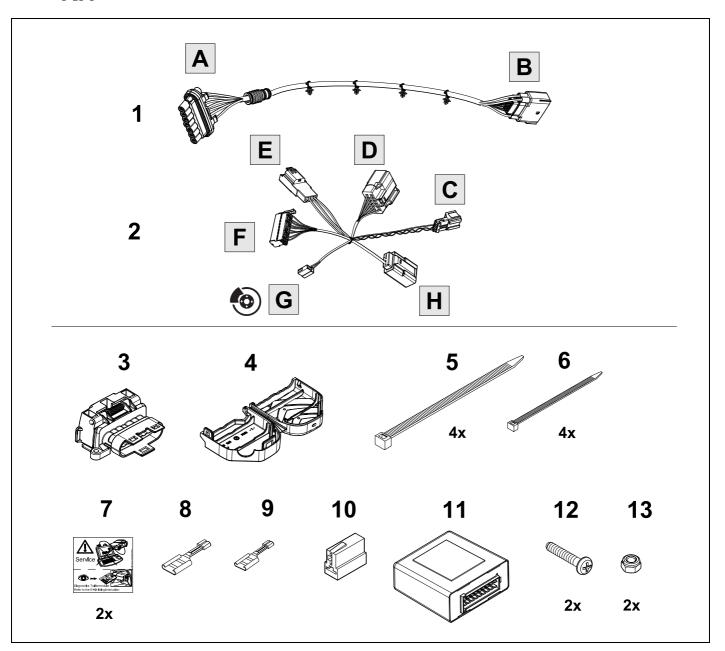


TOOLS

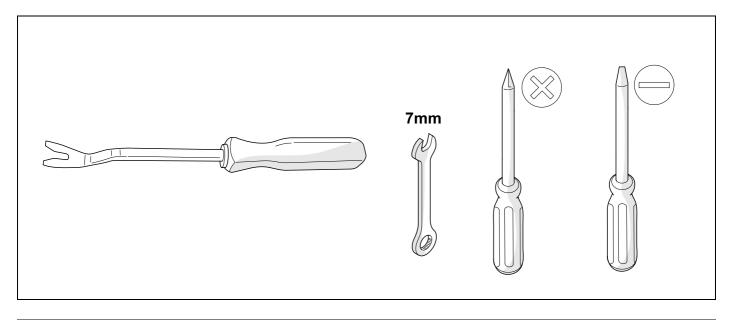





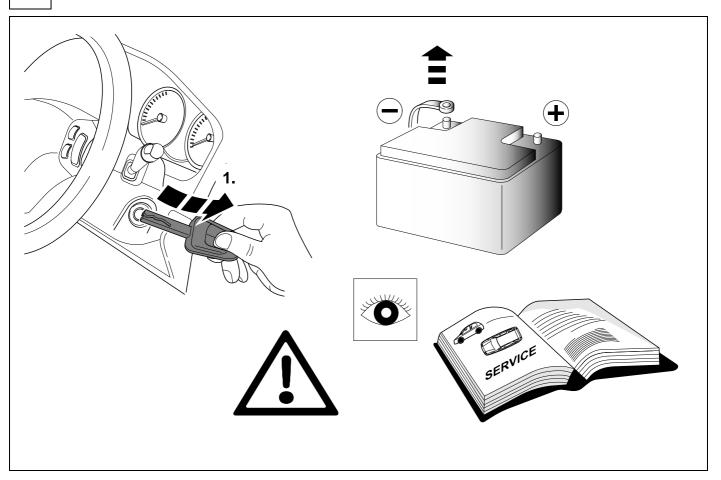


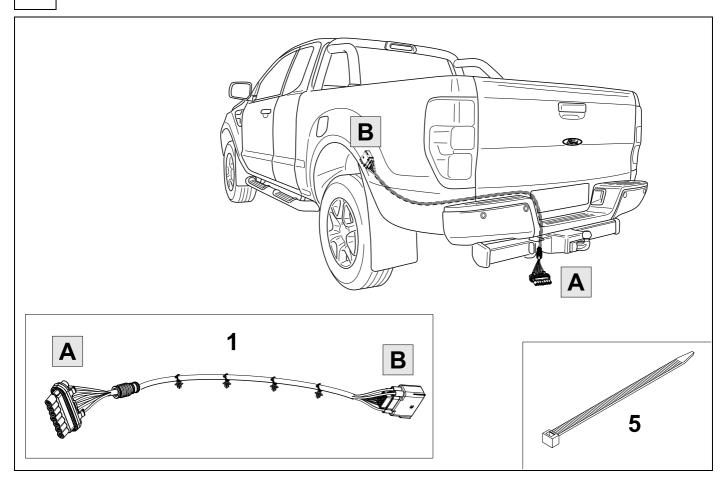





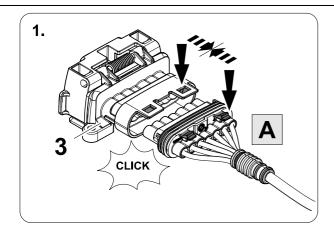


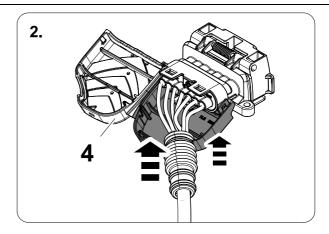

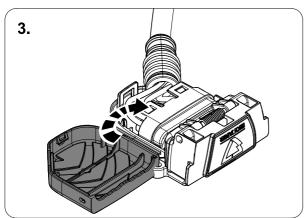


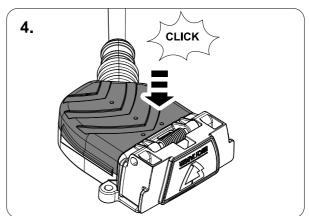

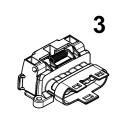

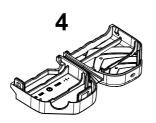




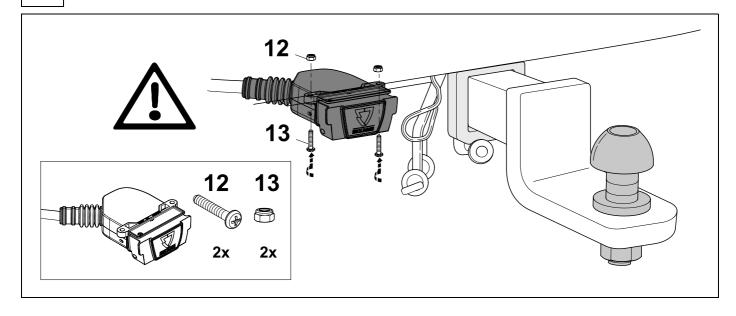




1	ye	\triangleleft
2	bk	1 3 R
3	wh	÷
4	gn	\Box
5	bu	
6	rd	Stop
7	bn	


6	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
GB	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied

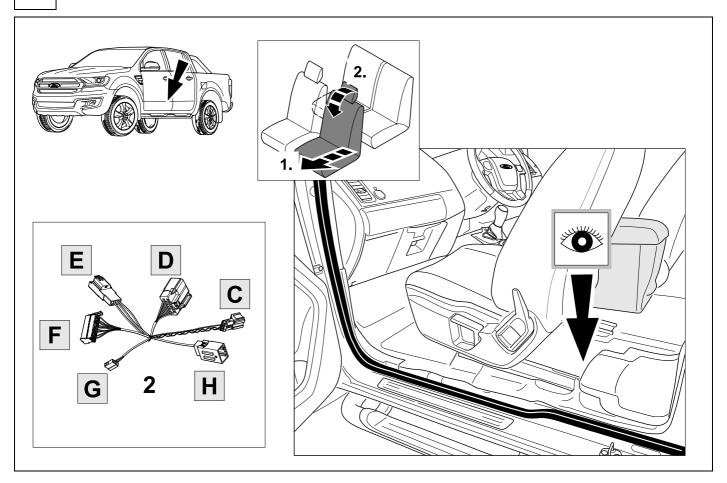






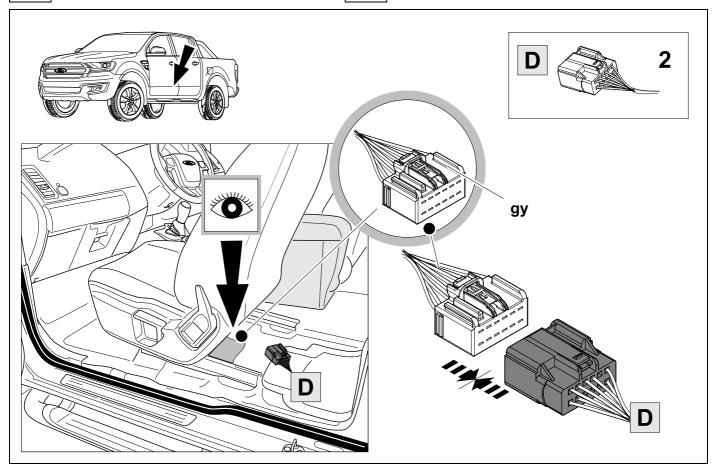

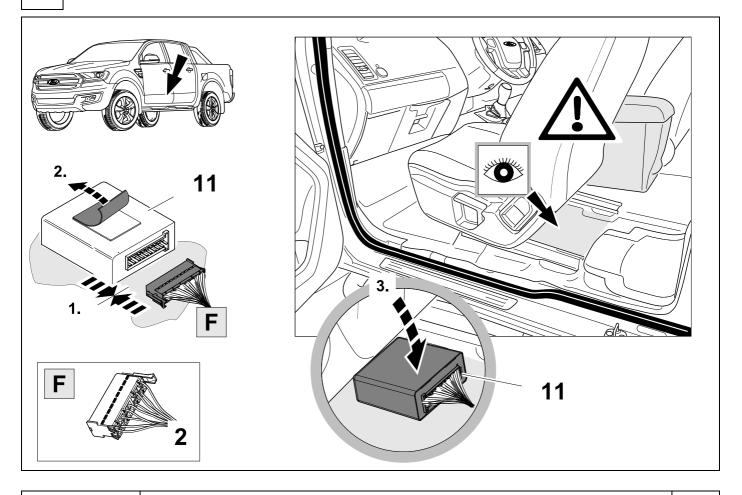






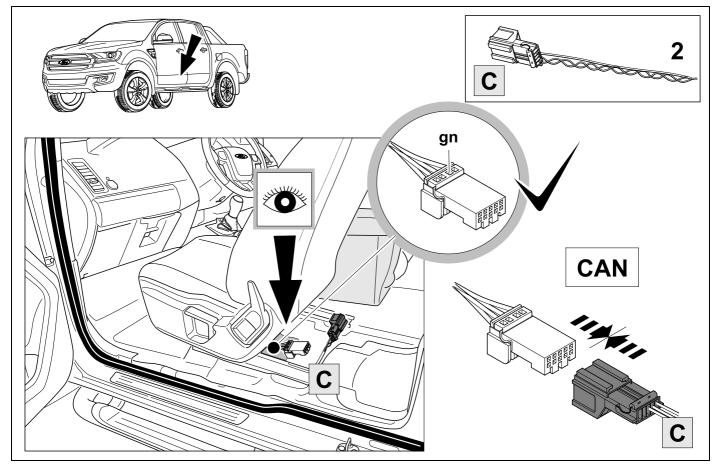

11 OPTION 2




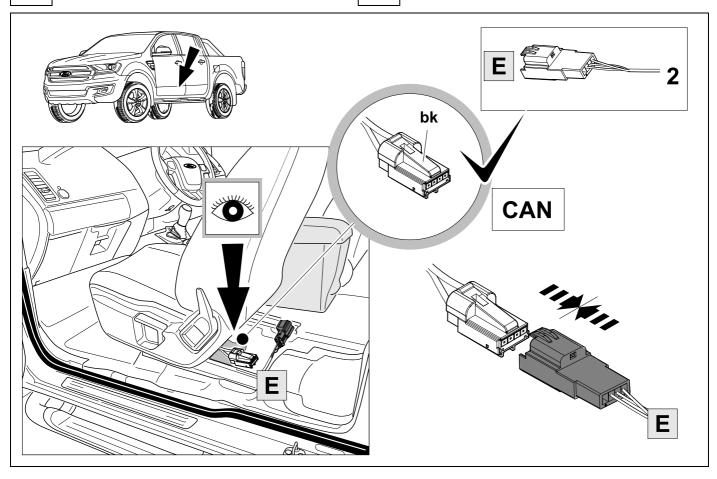

750036a230522 8 / 14







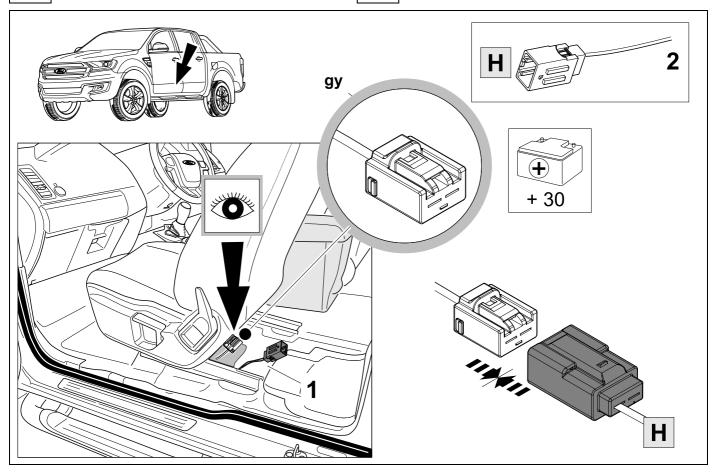


13 OPTIONAL



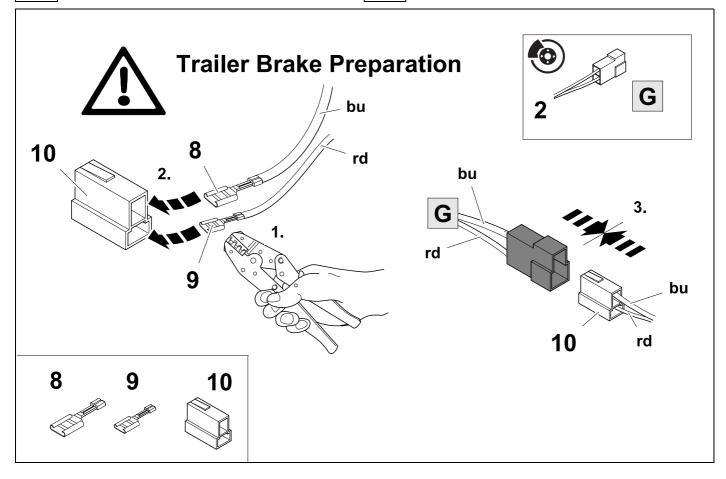

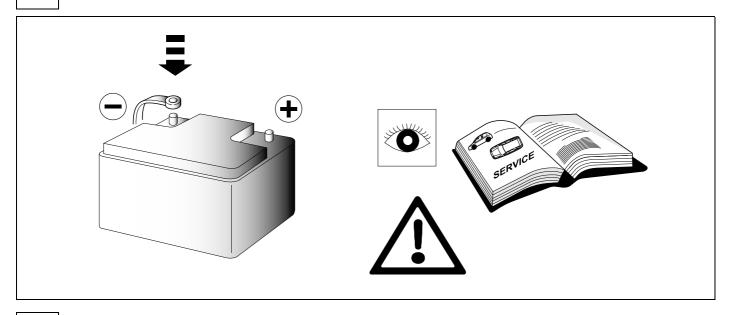


15 CHECK ALL LIGHTING FUNCTIONS

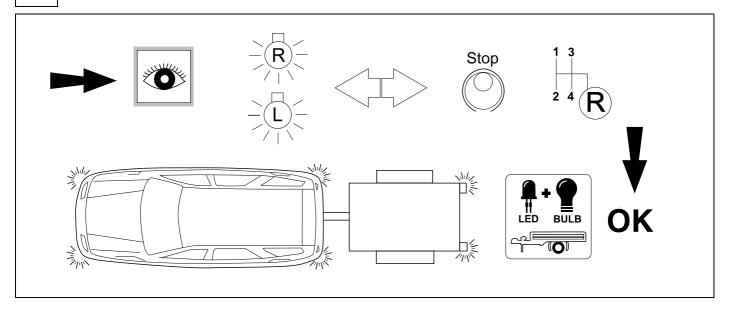


Optional:


For Automatic Rear Parking Sensor deactivation the vehicle needs to be coded using the Ford OEM or aftermarket coding system.

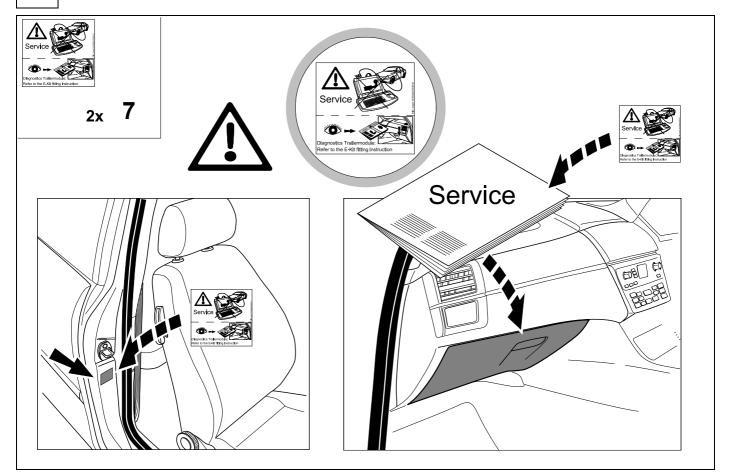

Status LED for self-diagnosis

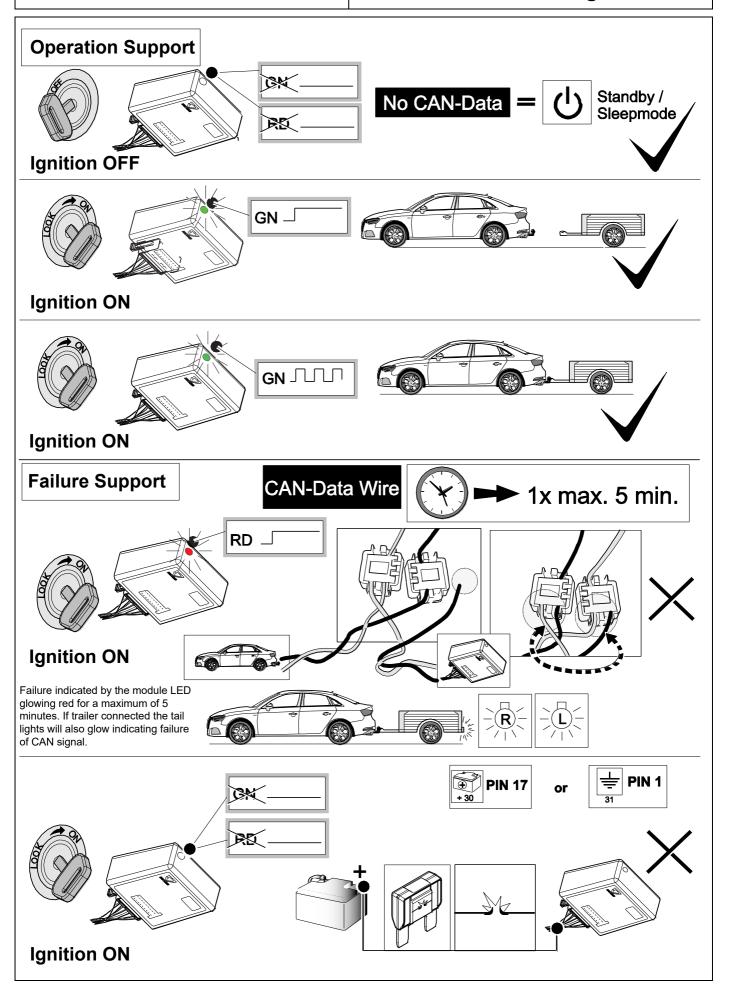

LEFT BLANK

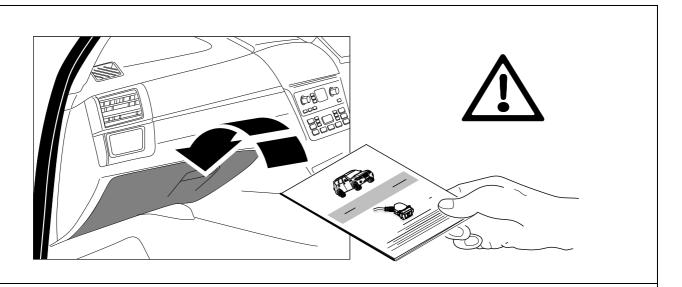



Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.

Scan this for our full E-Kit catalogue



750036a230522 14 / 14